


## Repair tube, steering knuckle housing

### To remove


1. Remove steering knuckle housing. See Front damper (MacPherson strut. Measure 5-20 mm from existing welding highest point.

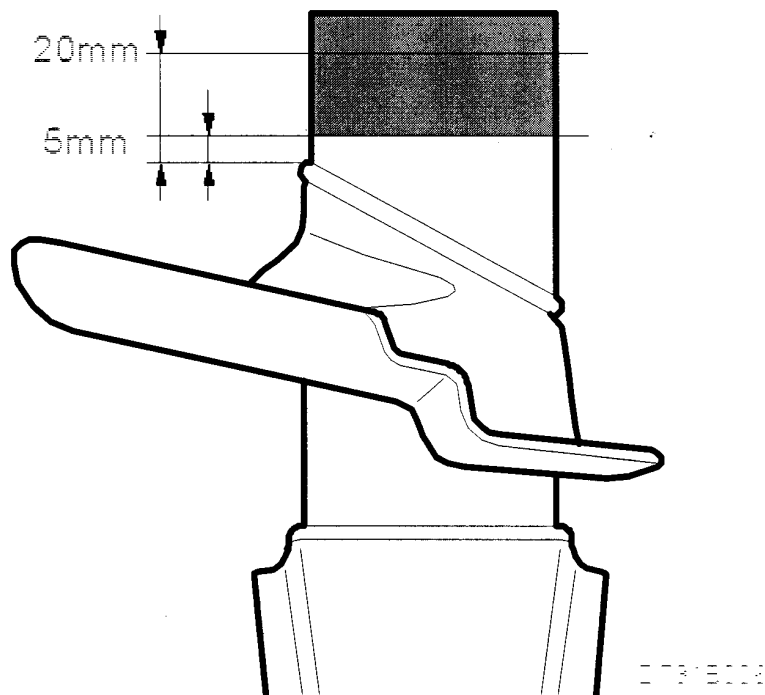


2. Cut off steering knuckle housing.
3. Remove burr from edge.
4. Sand clean for welding

### Mounting

1. Put the tube so that it rests against existing welds highest point.

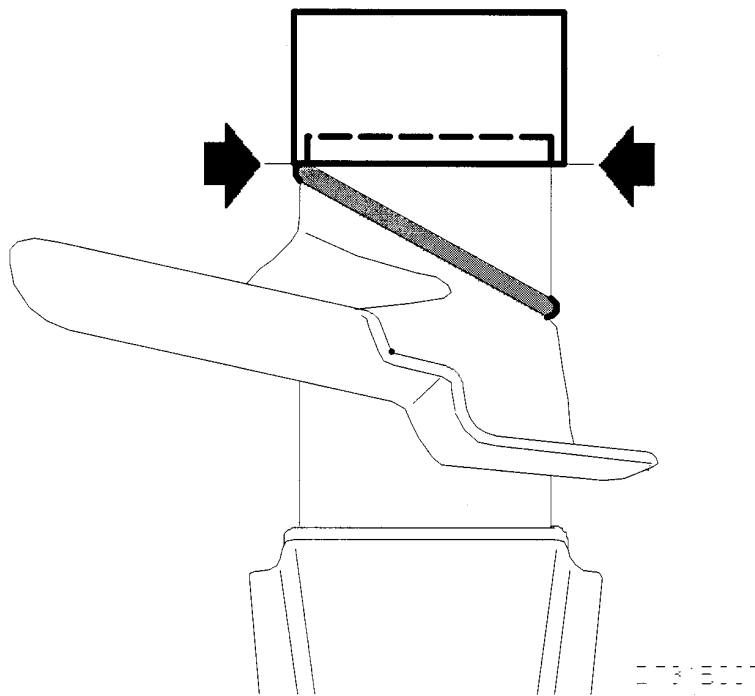

2. Weld tube to steering knuckle housing

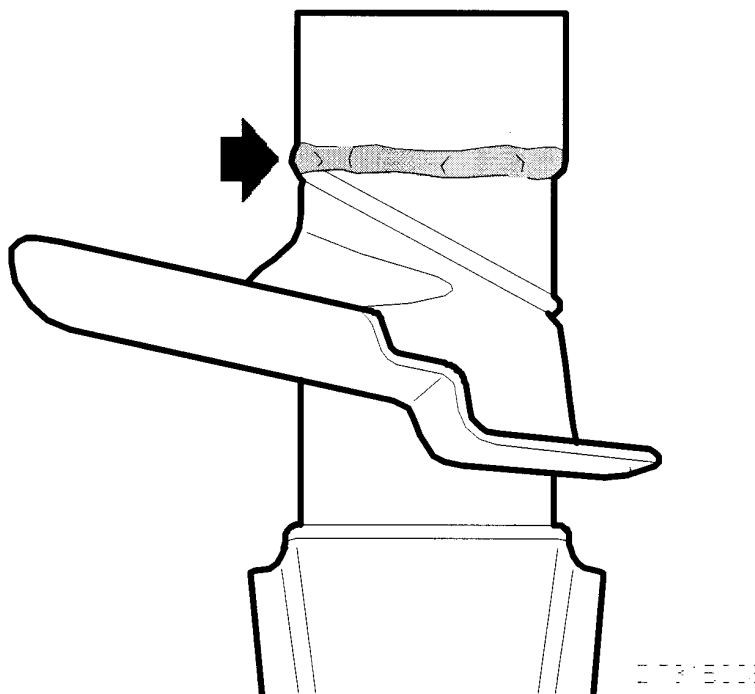

3. Sand clean welding
4. Rust-prevent with primer and very liquid underseal
5. Mount steering knuckle housing. See Front damper (MacPherson strut)